


# HOW-TO: ROOFTOP SNOW REMOVAL

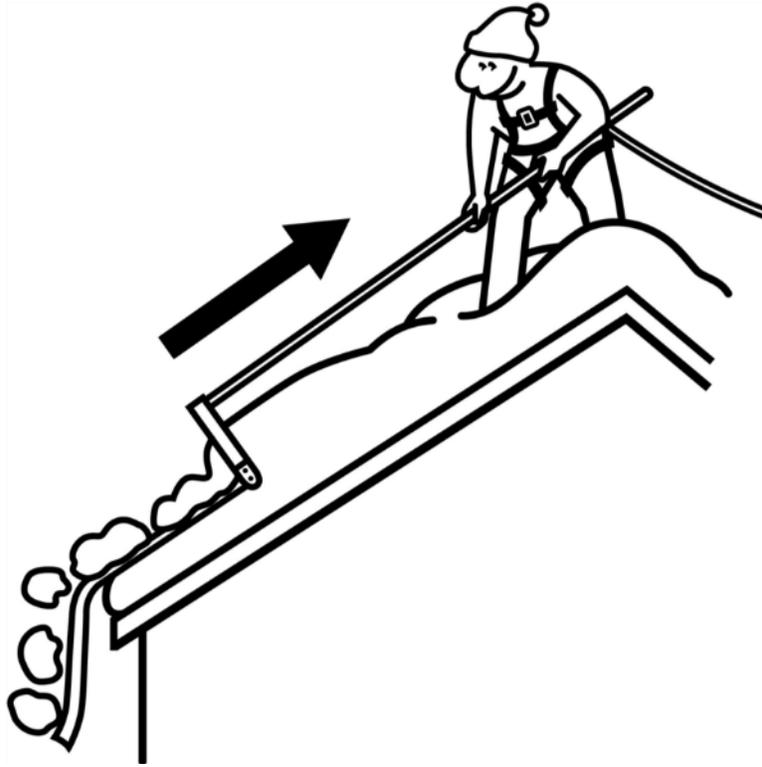


**SNOW  
PEELER®**

**SNOW  
PEELER®**  
**PREMIUM**

PAR | BY

**PolarMade®**

## HOW-TO: ROOFTOP SNOW REMOVAL

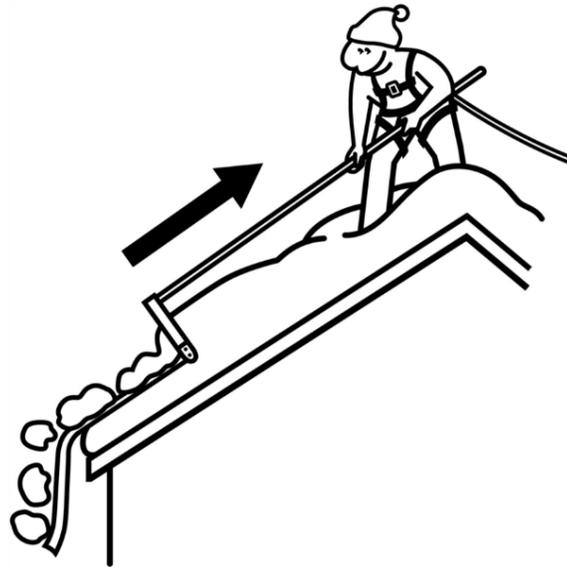


SnowPeeler is uniquely designed with a patent-pending, reversible frame adapter. This enables the user to effectively remove snow while working from the ground level or while positioned at the peak of the roof. With the rooftop configuration, the sectional pole is mounted on the top of the cutting frame in the opposite direction of the slide. With this application, the slide hangs over the edge of the roof and the cutting frame is pulled towards the user at the peak of the roof.

For rooftop snow removal, it is recommended to use SnowPeeler Premium which includes a 15 ft. snow slide with a 1 lb. weighted tail. The 15 ft. snow slide ensures that the tail of the slide will extend beyond the gutter/lower eave enabling snow to flow easily from the roof. An optional XL Slide Kit – 15 ft. can be purchased separately and added to the original SnowPeeler which included a 9 ft. slide.

### **Safety**

When working from the rooftop, safety is critical. Removing snow while on the roof can lead to falls resulting in severe injury and even accidental death. SnowPeeler should only be used from the rooftop when the user is safely secured with an approved fall protection safety harness. Safety harnesses can be purchased at your local hardware stores or online.

# HOW-TO: ROOFTOP SNOW REMOVAL

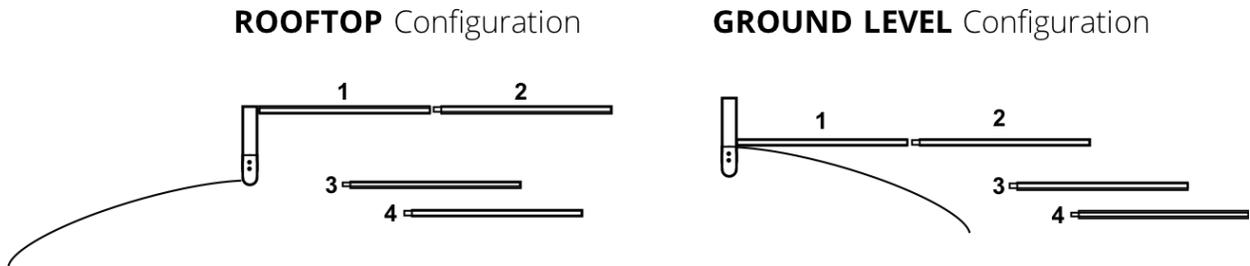

## Reconfiguring Your SnowPeeler

SnowPeeler is typically configured for ground level use with the frame adapter attached to the bottom edge of the cutting frame. When using SnowPeeler from the roof, the frame adapter is mounted on the upper edge of the cutting frame with the pole handle facing the opposite direction of the slide.


To configure SnowPeeler for the rooftop application, you must first uninstall the frame adapter from the bottom surface of the cutting frame by unscrewing the (two) ¼-in. cap screws. It is not necessary to remove the frame pole from the frame adapter.

Next, you'll want to install the frame adapter to the inside edge of the upper surface of the cutting frame. First, make sure the frame pole is pointed in the opposite direction of the slide. Next, position the flat surface of the frame adapter to the inside edge of the upper cutting frame. In this configuration, you will be using the outer two holes on the frame adapter.

Screw the (two) cap screws through the cutting frame into the frame adapter and hand-tighten. Use a 5/32-in. hex key to fully tighten. Before tightening make sure the handle is positioned perpendicular to the frame. You will also want to make sure that you do not over-tighten the screws, so you don't strip the threads on the inside of the adapter.

For additional information on the Rooftop configuration, please view our [Assembly Video](#) (starting at the 7:13 mark)

## HOW-TO: ROOFTOP SNOW REMOVAL

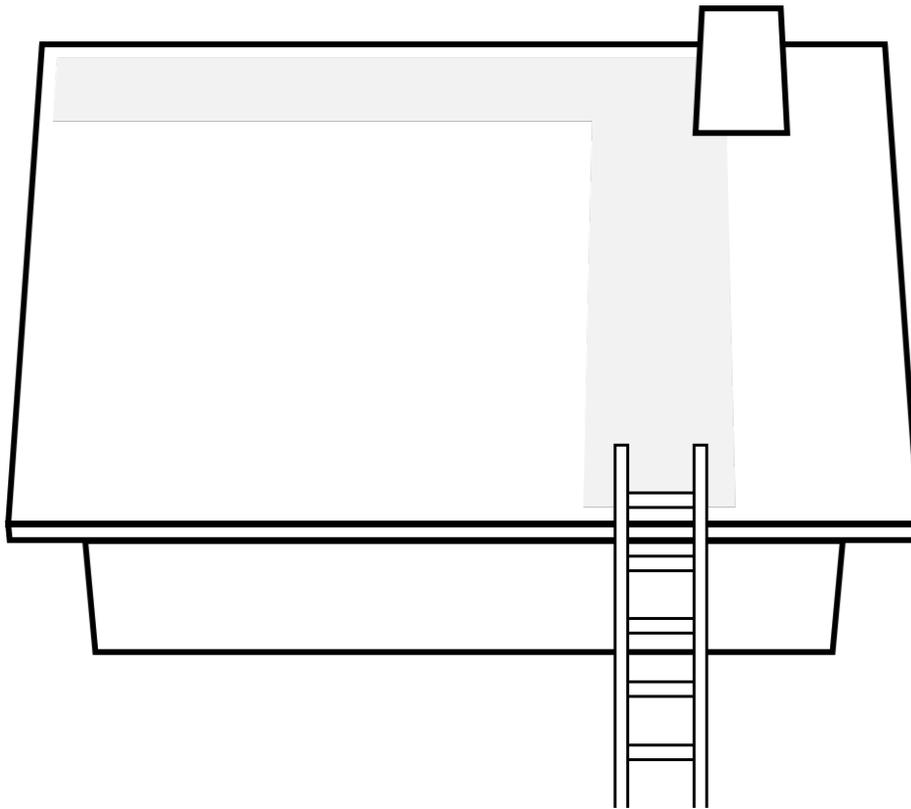

### STEP ONE


To safely use your SnowPeeler from the rooftop, you must first clear a path to the peak and across the roofline. This starts with careful placement of your ladder. You'll want to make sure it is on firm, level ground away from power and utility lines. In addition, always let someone know that you will be working on the roof and ask them to check up on you. If possible, have them "spot" you while you're on the roof.

### STEP TWO

Once you've cleared an access path, you'll want to carry your SnowPeeler to the roof unassembled. Once all of the components are on the roof, you will want to secure yourself to the roof with your safety harness.

If possible, roll out the slide on your SnowPeeler before going outside. At temperatures drop below  $-10^{\circ}\text{C}$  ( $14^{\circ}\text{F}$ ), the slide may stiffen making it difficult to unroll.


## HOW-TO: ROOFTOP SNOW REMOVAL

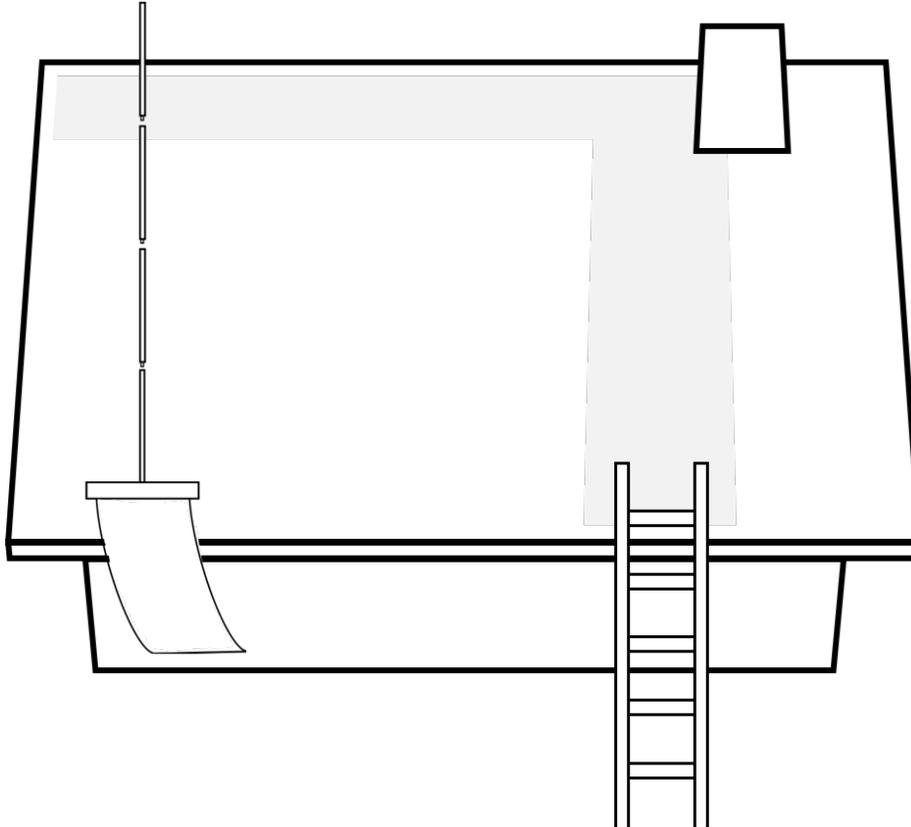

### STEP **THREE**

To effectively remove snow while working from the roof, the slide must be hanging over the lower eave or gutter. You will want to connect the number of pole extensions that will enable you to reach the lower edge of the roof from the peak.

## HOW-TO: ROOFTOP SNOW REMOVAL

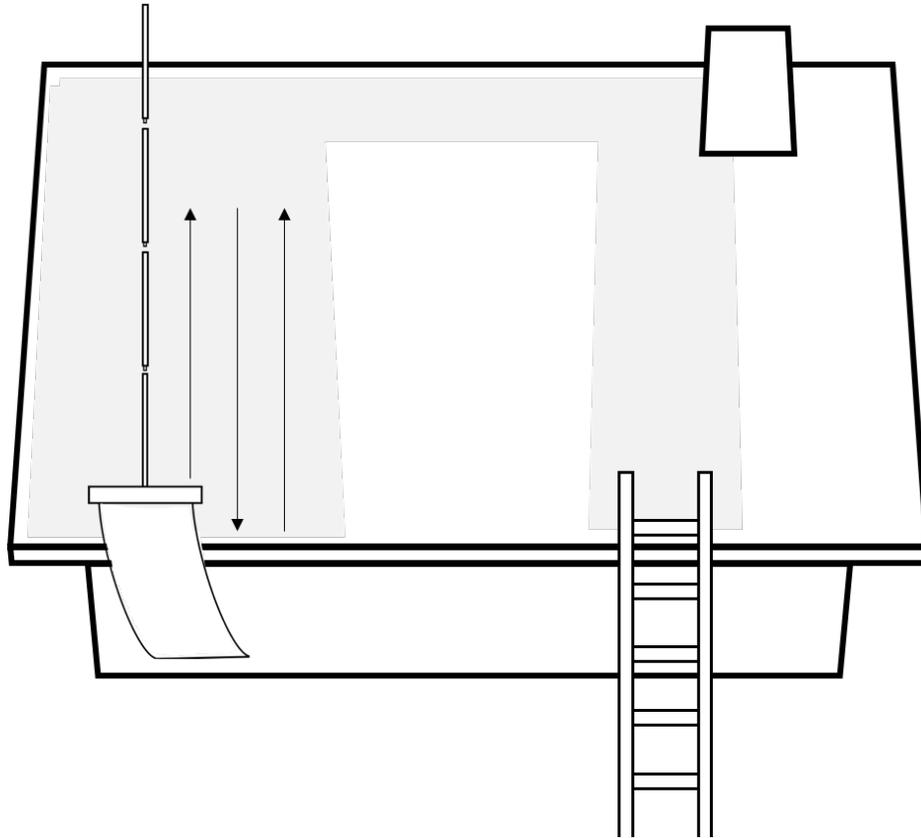

### STEP **FOUR**

With the slide hanging over the edge, pull the cutting frame towards you. Moving in a lateral direction, repeat these steps until your roof is cleared. Depending on the distance from your roof's lower edge to its peak, you may want to consider purchasing the [Handle Extension Kit - 10 ft.](#) and the [XL Slide Kit - 15 ft.](#) to ensure your safety and optimize the effectiveness of your SnowPeeler.

## HOW-TO: ROOFTOP SNOW REMOVAL

Have additional questions?

**Please visit the FAQ page on our website:**

<https://www.polarmade.com/en/explore/faq>

**Or contact us directly:**

Email: [info@polarmade.com](mailto:info@polarmade.com)

Phone: (888) 425-0850